


TG-201 LINKX user manual







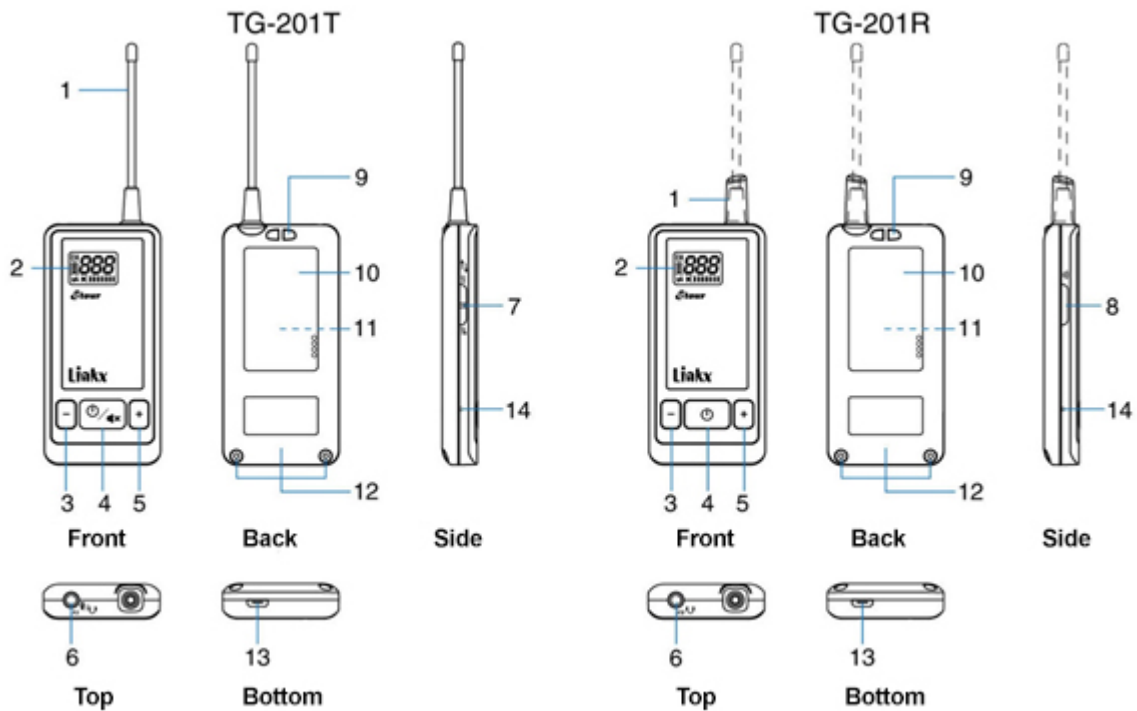

 


Device diagram and instructions



1. Antenna
2. LCD display
3. Down button for changing channel and adjusting volume
4. On / Off / Mute / Set – Transmitter buttons; Additional function for TG-201T: to mute the audio signal
On / Off (Off) / Set – Receiver buttons
5. Up button for changing channel and adjusting volume
6. Headset input / microphone input (transmitter)
Headphone output (receiver)
7. Two-way communication switch (transmitter)
8. Talk button (receiver)
9. Lanyard connection point
10. Label area
11. Battery compartment and a built-in lithium polymer battery
12. Battery compartment cover and screws
13. Micro-USB charging port
14. Force quit button



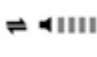

Explanation of the illustration on the LCD display

	TG-201T Transmitter	TG-201R Receiver		TG-201T Transmitter	TG-201R Receiver
	Channel change			—	No signal
	Muted/ Microphone not connected	Muted		100% of battery remaining	
	Microphone volume level 5	Headphones volume level 5		70% of battery remaining	
	Two-way communication on & headphones volume level 4	—		30% of battery remaining	
	—	Two-way communication on & headphones volume level 4		10% of battery remaining	
	Two-way communication mode				


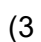 



Connecting the headset to the transmitter and the headphones to the receiver

- Insert the plug (3.5 mm) of the headset into the transmitter input (6) and the headphone plug (3.5 mm) into the receiver (6). Make sure that the plug is fully inserted into the device.

Turning the device on and off

- Press and hold the device's power button for 2 seconds  /  (4), which will display the last channel used when turned on. The device switches off after pressing and holding the same button for 2 seconds.
- If the receiver does not receive the signal from the transmitter for 20 minutes, it will turn off automatically (battery saving)

How to change the channel in the receiver and transmitter


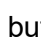 
- Press simultaneously the buttons:   (3 and 5) and hold for 2 seconds until the icon  starts flashing, set the desired channel by pressing  (5) or  (3). Confirm the set channel by quickly pressing the on / off button (4).
- Make sure that the receiver/receivers and the transmitter are set on the same channel. When the receiver is on a different channel and is not receiving a signal from the transmitter, its display will flash.

Automatic channel synchronisation




- When the transmitter channel changes, the enabled receivers automatically synchronise with the transmitter channel.

Changing the volume of the transmitter and receiver

Receiver

- Using  buttons (3) and (5)  allows to set the volume level from 1 to 8 (a flashing volume icon indicates that the device is completely muted).

Transmitter

- Using  buttons (3)  and (5) allows to set the volume level from 4 to 8.
- Quickly pressing the power  switch (4) activates the mute function (MUTE) - the volume indicator disappears and the crossed sound symbol icon flashes. Quickly pressing the power switch again cancels the mute function.

Memory of the volume level

- The receivers remember the last volume level setting and remain on that setting when switched on again.

Choice of one-way and two-way communication

- The transmitter allows you to control the choice of one-way and two-way communication. When the transmitter holder talks, the system allows the receiver holder to engage in the conversation. To enable two-way communication, move the slider on the side of the transmitter to the ON position (the volume icon will start flashing). The receiver holder can join the conversation after pressing and holding the "speak" button (8) located on the side of the device. The receiver holder should speak into the built-in microphone built into the upper part of the device while holding down the "speak" button (other receiver holders can hear the entire conversation). Releasing the button removes the receiver from the conversation and allows another receiver holder to join it. Quickly double-clicking on the "speak" button allows for speaking without having to constantly hold the "speak" button. Pressing "speak" again will revert it to the previous setting. The OFF position of the slider on the side of the transmitter allows only one-way communication (receiver holders cannot join the conversation).

WARNING

- Receivers and transmitters turn off automatically while charging. To use the device while charging, turn it on again.