



■ Illustration

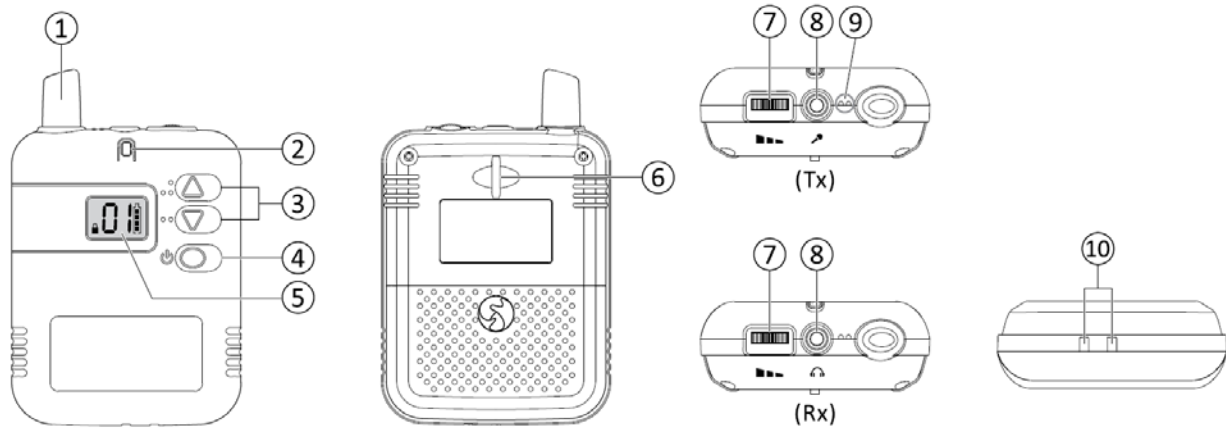

- ① Antenna
- ② Power LED indicator (Tx)
 - Green: Sufficient power
 - Red: Insufficient power
 Power / Rx LED indicator (Rx)
 - Green: Sufficient power and Tx signal received
 - Red: Insufficient power and Tx signal received
 - No LED: Tx signal NOT received
- ③ Up / Down button
- ④ Power / Set button
- ⑤ Backlit screen
- ⑥ Lanyard hole
- ⑦ Microphone volume control (Tx) / Earphone volume control (Rx)
- ⑧ 3.5 mm microphone jack (Tx) / 3.5 mm earphone jack (Rx)
- ⑨ Inbuilt microphone (Tx only)
- ⑩ Charging port

■ Display

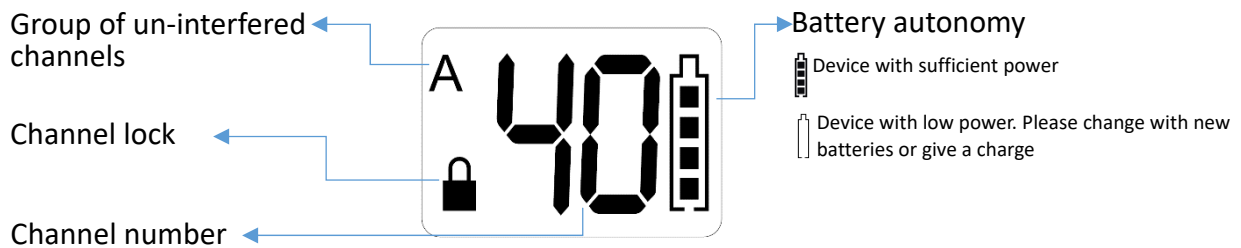

■ General operation

◆ Power on

Press the power button for 1 second to turn the device on.

◆ Unlock and adjust the channel

When the device is on, press and hold both ▲ and ▼ buttons until symbol disappears. Short press the ▲ and ▼ button to select another preferred channel. The channel will automatically be locked again when being idled for 1 second.

◆ Adjust microphone / earphone volume

Tune the volume control on top to adjust the volume of microphone / earphone.

Kindly note listening at highly volume for long periods may damage your hearing.

◆ **Power off**

Press and hold the power button for 2 seconds to turn the device off


◆ **Activate out-of-range alarm (Rx only) (optional)**



Receivers will activate their out-of-range alarm if they do not receive the signal from compatible transmitter for 1 minute. *Note this function will be available only when it's activated via setting adjustment (see details in the paragraph of "Advanced operation").*

■ **Advanced operation**

◆ **Limited un-interfered channels**

 
Limited un-interfered channels are available for selection.


1. Press and hold the ▼ button to power the device on and enter the setting.
2. Default screen  shows up. Press the ▲ or ▼ button to scroll the option.
3. When the option is determined, press the ● button to confirm.
4. The device will leave the setting menu automatically and be powered on afterwards.

	All channels are open for selection.
	Only un-interfered channels are available for selection.
<i>Note Channel numbers shown on the screen vary upon frequencies.</i>	

 
◆ **Setting adjustment**




● **Transmitter (Tx)**

1. Press and hold the ▲ button to power the device on and enter the setting.
2. Default screen  shows up. Press the ▲ or ▼ button to scroll the option.
3. When the option is determined, press the ● button to confirm.
4. The device will leave the setting menu automatically and be powered on afterwards.

<p>Channel lock</p> 	<p>The channel shown on transmitter will automatically be locked when it's powered on.</p> <ul style="list-style-type: none"> - ON (default) - OF
---	---

- **Receiver (Rx)**

1. Press and hold the ▲ button to power the device on and enter the setting.
2. Default screen  shows up. Press the ▲ or ▼ to scroll the options.
3. When the option is determined, press the ● button to confirm and enter next setting.
4. The device will leave the setting menu automatically and be powered on afterwards.

Power saving 	The receiver will be powered off automatically after being idled for below-defined time. <ul style="list-style-type: none"> - 0 (minute) - 10 (minutes) - 20 (minutes) <i>(default)</i> - 30 (minutes)
Out-of-range alarm 	The receiver will activate its alarm automatically if it's out of compatible transmitter's range for 1 minute. <ul style="list-style-type: none"> - ON - OF <i>(default)</i>
Channel lock 	The channel shown on receiver will automatically be locked when it's powered on. <ul style="list-style-type: none"> - ON <i>(default)</i> - OF

- ◆ **Back to default**

Press ▼, ▲ and power buttons simultaneously to turn the device on and its settings will be back to default automatically. Followings show all default settings.

- **Transmitter (Tx)**

- ✧ Channel number: 01
- ✧ Channels: All channels are open
- ✧ Channel lock: ON

- **Receiver (Rx)**

- ✧ Channel number: 01
- ✧ Channels: All channels are open
- ✧ Power saving: 20 (minutes)
- ✧ Out-of-range alarm: OF
- ✧ Channel lock: ON

- **Distribution and service**



Mexpo
 ul. Kazimierza Pułaskiego 8
 81-368 Gdynia

+48 58 550 10 25

+48 22 39 81 699

www.systemtourguide.com

office@systemtourguide.com