



Okayo EJ-7T Transmitter

1. Device diagram

1. Aux In (3.5mm) input
2. Microphone sensitivity level
3. Button initiating/ending channel change
4. LCD display:
 - battery charge indicator
 - selected channel number
5. Channel selection (changing channel up or down)
6. Power and signal indicator:
 - red – the device is on
7. Microphone mute button
8. On/off switch
9. Microphone input (3.5 mm jack)



2. User manual

1. Turn on the transmitter (no. 8) – the power LED (no. 6) will light up.
2. Connect the microphone do the microphone input (no. 9).
3. To change the channel, press the SET button (no. 3) and hold for 2-3 seconds. The channel number will start flashing. Select the channel with the UP or DOWN buttons (no. 5). Confirm the selection by pressing the SET button again.
4. To set the microphone sensitivity level, turn the knob (no. 2).
5. If the battery indicator is empty, charge the accumulator batteries (Ni-MH) by inserting the device into the charger (alternatively, AA-type alkaline batteries can be used).

Warning! Never insert the device into the charger if there are alkaline batteries inside!

3. Service and distribution



MEXPO
ul. Kazimierza Pułaskiego 8
81-368 Gdynia

+48 58 550 10 25
www.systemtourguide.com
biuro@systemtourguide.com