 





Okayo C200 User's manual

 
1. The interface

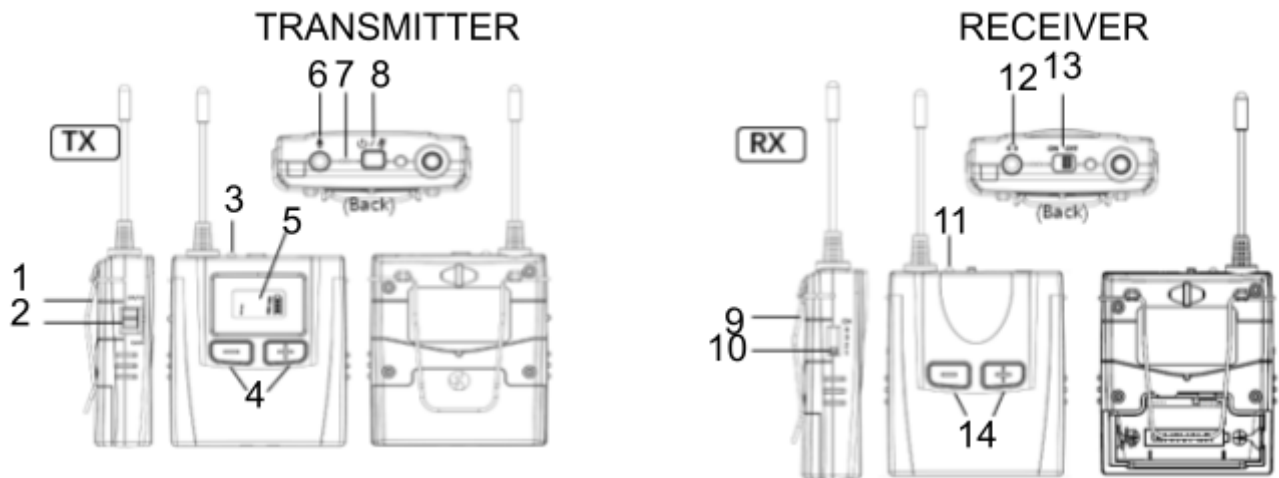

- 1) Belt clip
- 2) Slider: Microphone amplification (Gain)/ group channel select (CH/ G)
- 3) Signal strength indicator
- 4) +/- buttons
- 5) Display
- 6) 3.5 mm microphone in
- 7) Built-in microphone
- 8) Power  / mute button


- 9) Belt clip
- 10) Channel selector
- 11) Signal strength indicator
- 12) 3.5 mm headphone jack
- 13) Unit ON/ OFF slider
- 14) +/- buttons

2. The display

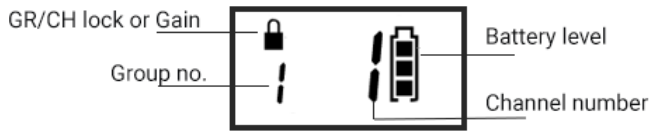

Low battery level

 
Replace the batteries if the signal indicator turns red and the battery icon shows just one bar.

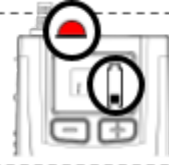

3. The signal strength indicator

	Transmitter (TX)	Receiver (RX)
Green diode	Sufficient power	
Red diode	Low power	
Blinking diode	Muted	Receiver outside the group
Diode off	Unit off	

 4. Włączanie/wyłączanie urządzeń

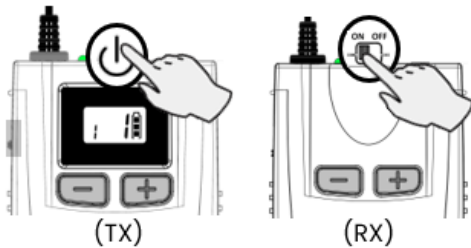


- Transmitter (TX): Press and hold the button to turn the unit on or off.
- Receiver (RX): Slide the slider to ON or OFF in order to turn the unit ON or OFF. Note! The Receiver will shut down automatically if it receives no signal from the transmitter for 20 minutes. If this happens, switch the power slider again to turn the unit on.




In order to ensure top sound quality we recommend that the rider's receiver be placed in a visible location, e. g. on the shoulder or attached to a pocket using the dedicated clip. Avoid placing the receiver under your clothing or inside your pocket.

 5. Adjusting microphone gain on the transmitter

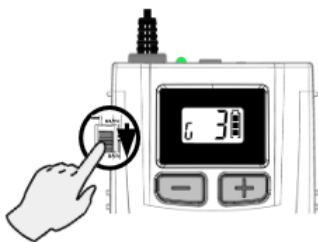


- Slide the slider on the transmitter down to select the GAIN function. If necessary, adjust microphone gain using the +/- buttons (1-5, default: 3).
- Slide the slider back up to its original position (GR/ CH) after you've adjusted the microphone gain.

 6. Selecting the group channel (GR/ CH) on the transmitter

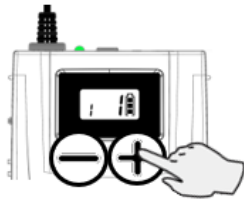


- Slide the slider on the transmitter to GR/ CH. Select the group number using the + / - buttons (available channels: 1-4).

 7. Adjusting headphone loudness on the receiver (RX)

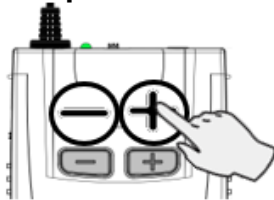


- Press + or – to increase or decrease the loudness on the headphones.

 8. Selecting the same channel on the receiver (RX) as on the transmitter (TX)

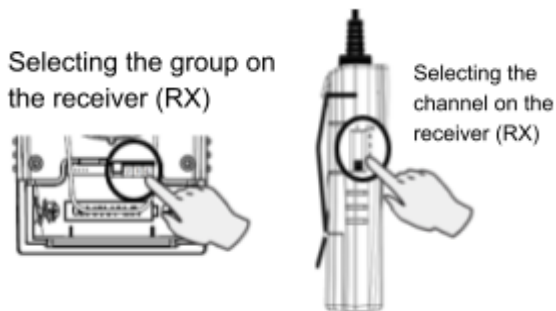

- Open the cover of the battery compartment. Slide the slider to pick the selected group number.
- Set the same group number as on the transmitter (TX) using the slider on the side of the unit.

 
9. Locking/ unlocking the GR/ CH function or the Gain on the transmitter (TX)

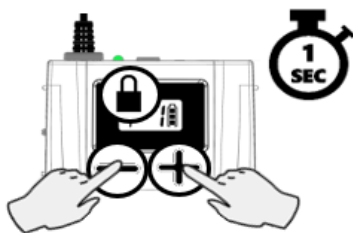

- Press and hold the + and – buttons on the transmitter simultaneously to unlock the group channel select (GR/ CH) and microphone gain functions. Note! Both functions will be unlocked simultaneously.
- The padlock symbol will show when the GR/ CH and GAIN functions are locked. To unlock again, press and hold the buttons + and – simultaneously again.

10. Wyciszenie mikrofonu w nadajniku (TX)



- A short press of the power  button when the transmitter is on will turn the microphone on or off.
- The signal strength indicator blinks when the microphone is off.

11. Technical specifications

Transmission modulation	4 GFSK, digital
Radio frequency range	500-900 MHz, depending on region
Channel count	16
Carrier frequency band	300-3400 Hz
Line-of-sight range ¹	>120 m, depending on region
Battery life ²	Transmitter: >25 godzin Receiver: >40 godzin
Battery	1 x AA battery
Dimensions	61 x 70 x 20 mm, excl. antenna and belt clip
Weight with battery	ca. 65 g

¹ Range will depend on the environment and the country.

² Battery life will depend on the mode of usage.

12. Service and distribution



MEXPO
ul. Kazimierza Pułaskiego 8
81-368 Gdynia

+48 58 550 10 25
www.systemtourguide.com
biuro@systemtourguide.com