



# Okayo EZtour user manual

## 0. Battery warning

- Charge the units fully before first use.
- Charge the unit when the battery level drops below 50%.
- Before long-term storage of the device make sure that the battery capacity is 50% and charge the units every three months.
- Stop using the devices if you notice overheating or battery damage. Contact the seller.

## 1. Models



**Master (M)**  
Model: ET-30T  
Housing colour: red





**Sub-Master<sup>1</sup> (S)**  
Model: ET-31T  
Housing colour: black



**Receiver (R)**  
Model: ET-30R  
Housing colour: yellow

## 2. Interface

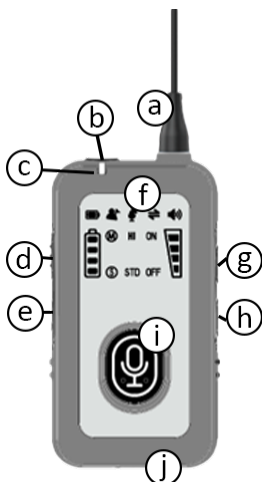

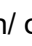- a. Antenna
- b. 3.5 mm microphone jack (TRRS)
- c. Signal indicator
- d. Function button
- e.  button (on/ off)
- f. Status and settings
- g. **+** button
- h. **-** button
- i. Backlit conversation button
- j. USB-C charging port

<sup>1</sup> The Sub-Master only works if there is a Master unit present.

### 3. Diode/ signal indicators

Status	Master	Sub-Master	Receiver
Blue	Full power		
Red	Low power		
Stable light	Device is on	Device is on and paired correctly	
Slow blinking	-	Device is on, but is not paired with the rest of the devices	
Fast blinking	Pairing or searching for a new channel	Device is on and searching for its main (Master) unit	
Off	Device is off or settings are being adjusted		Device is off

### 4. Conversation indicator



**Blue.**

Your microphone is on.



**Red.**


You are muted.



**No backlight.**

No conversation possible.

### 5. Battery status indicator

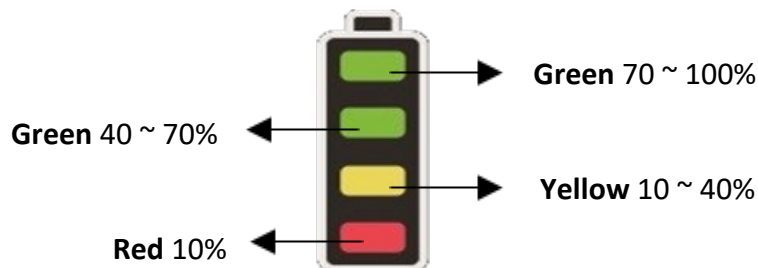

### 6. Low power<sup>2</sup> ⚠️

Charge<sup>3</sup> the unit as quickly as possible if you get a low power indication (red diode/ battery indicators).



<sup>2</sup> If You get a low battery warning during a tour, you can top the unit up using a PowerBank.

<sup>3</sup> Proprietary charging stations are available.

## 7. Let's start the trip – step by step instructions!

### STEP 1. Turn on the Master unit before the tour



Press and hold the power button  for two seconds to turn the unit on.

### STEP 2. Adjust microphone sensitivity<sup>4</sup> and activate or deactivate Talk Back<sup>5</sup>



- Press and hold the function button and the **+** button for three seconds on the Master unit, until "STD" or "HI" (depending on the settings) starts blinking.
- Adjust the setting using the **+** and **-** buttons, then press the function button to confirm. The symbol 'OFF' or 'ON' (depending on the settings; for Talk Back<sup>6</sup>) starts to blink.
- Select „ON" or "OFF" (activation/ deactivation) using the buttons **+** and **-**, then confirm/ exit by pressing the function button.

#### ⇒ Talk Back function:

- When "ON" is shown – transmission function available on the Receivers. Recipients may talk back to You.
- When "OFF" is shown - transmission function not available on the Receivers. Recipients may only listen to You.



#### Microphone sensitivity:

- When "HI" is shown – high microphone sensitivity. This mode is recommended in locations where silence is required (speaking quietly).
- When "STD" is shown – standard microphone sensitivity. Recommended anywhere there is ambient noise.

<sup>4</sup> The Sub-Master may adjust microphone sensitivity proceeding in the same manner.

<sup>5</sup> „Talk Back" is not available on Sub-Master units.

<sup>6</sup> Make sure the Receivers are within range of the Master, when „Talk Back" is activated.

### STEP 3. Create Your group (pairing)



- Press and hold the function button for three seconds, in order for the signal indicator on the Master unit to start blinking.
- Then turn on the Sub-Master and Receiver units. The diodes will turn blue.
- Press the function button on the Master for a short while to complete pairing.

### STEP 4. Adding members to group (pairing additional Receivers) during a Tour

Same as STEP 3.

**⚠** Only the Master unit may add group members (pair Receivers).

### STEP 5. Changing the channel on all Receivers during a tour



Change the channel if the Sub-Master unit and the Receiver units will not easily pick up sound from the Master unit.

- Press and hold the function button and the **-** button for three seconds, in order for the diode on the Master unit to start blinking.
- The diodes on the Sub-Master and Receiver units will start blinking.
- You may continue your tour when the diodes on all units cease blinking.

### STEP 6. Remotely ending the tour



On the Master unit, press and hold the power button **⏻** for three seconds to turn them off. The Sub-Master and Receivers will shut off.

## 8. Service and distribution



**MEXPO**  
Kazimierza Pułaskiego 8  
81-368 Gdynia, Poland

+48 58 550 10 25  
[www.systemtourguide.co.uk](http://www.systemtourguide.co.uk)  
[office@systemtourguide.com](mailto:office@systemtourguide.com)